


LAYOUT

CONCEPTS

iP-CB Intelligent Circuit Breaker Connecting With An Accessory Bus

IMPORTANT

Always set the iP-CB trip current with the header to be LOWER than the main system maximum current output.

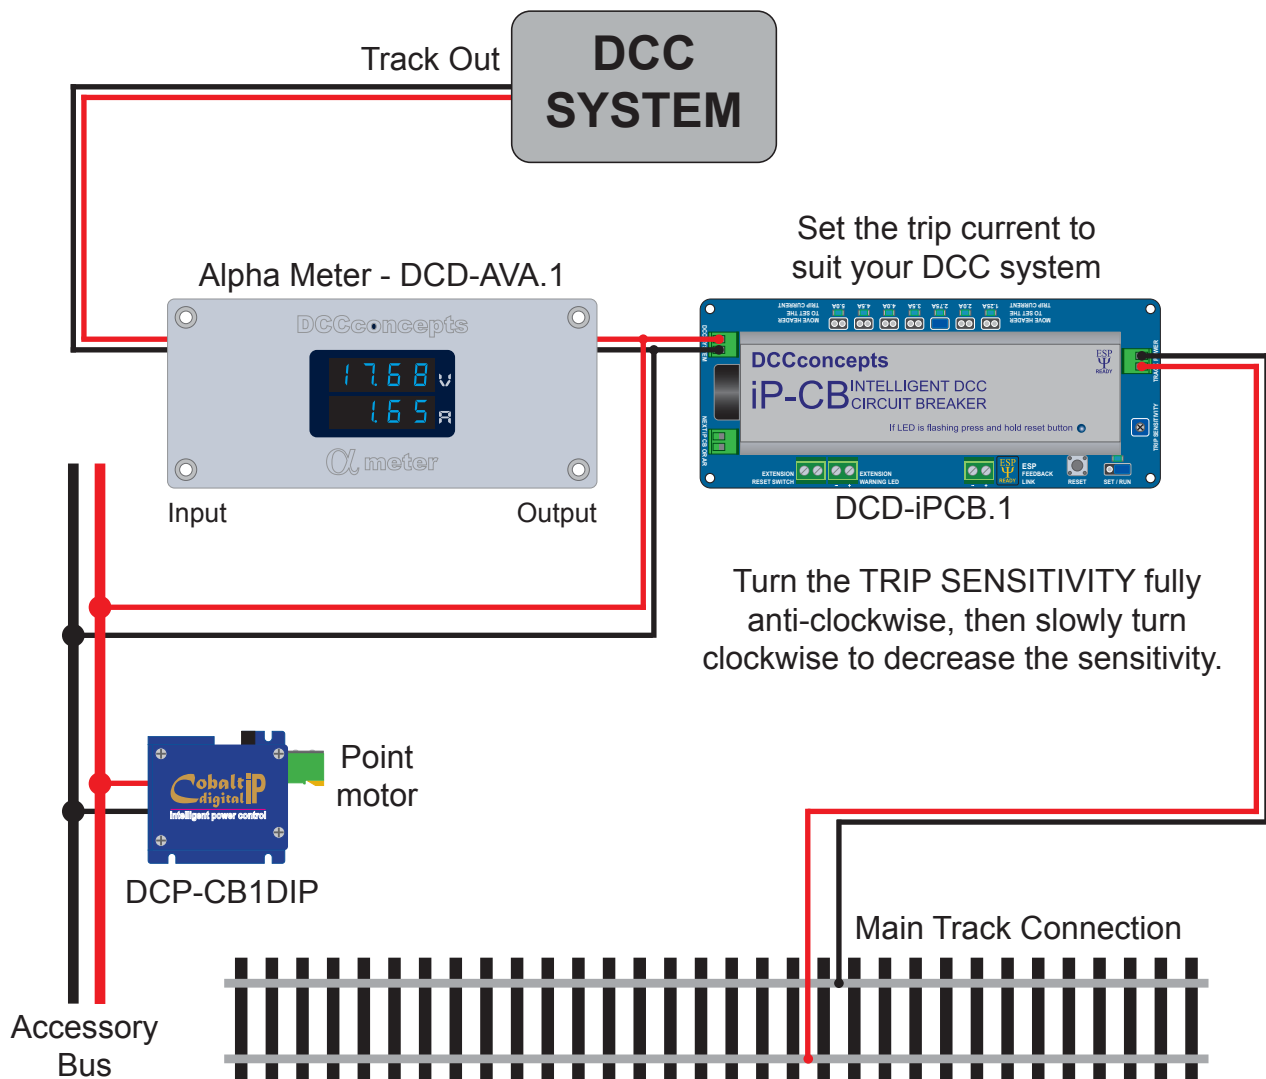

To connect the Cobalt iP Digital, see the data sheet on *Cobalt iP Digital Point Motor Frog Wiring From An Accessory Bus*