


# LAYOUT

## CONCEPTS

### iP-CB Intelligent Circuit Breaker How To Change An Any CV Setting

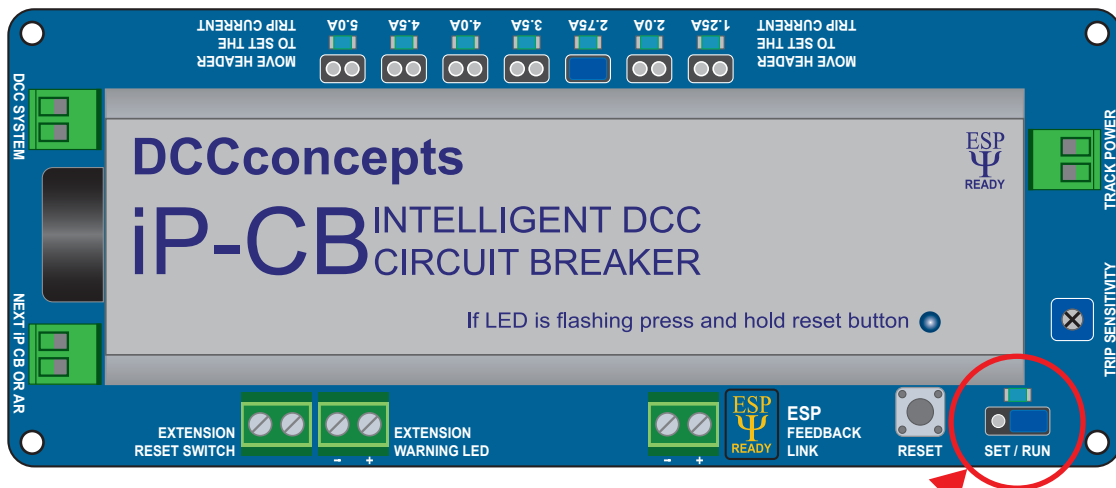

- 1 - Turn **OFF** power to the iP-CB.
- 2 - Move the **SET/RUN** jumper to the **SET** position.
- 3 - Restore power to the iP-CB and the blue LED above the **SET/RUN** switch will flash once per second.
- 4 - Use **PROGRAM ON THE MAIN** mode on your DCC system, as per your instruction manual from your DCC system.
- 5 - Enter any **LOCO** address that is **NOT** being used anywhere on the layout.
- 6 - Enter the CV number your wish to change.
- 7 - Enter the new value for the CV.
- 8 - If the new CV has been successfully received the **SET/RUN LED** will flash quickly multiple times.
- 9 - Turn power **OFF** to the iP-CB.
- 10 - Move the **SET/RUN** jumper to the **RUN** position.
- 11 - Restore power to the iP-CB