


LAYOUT

CONCEPTS

iP-CB Intelligent Circuit Breaker How To Set CV57

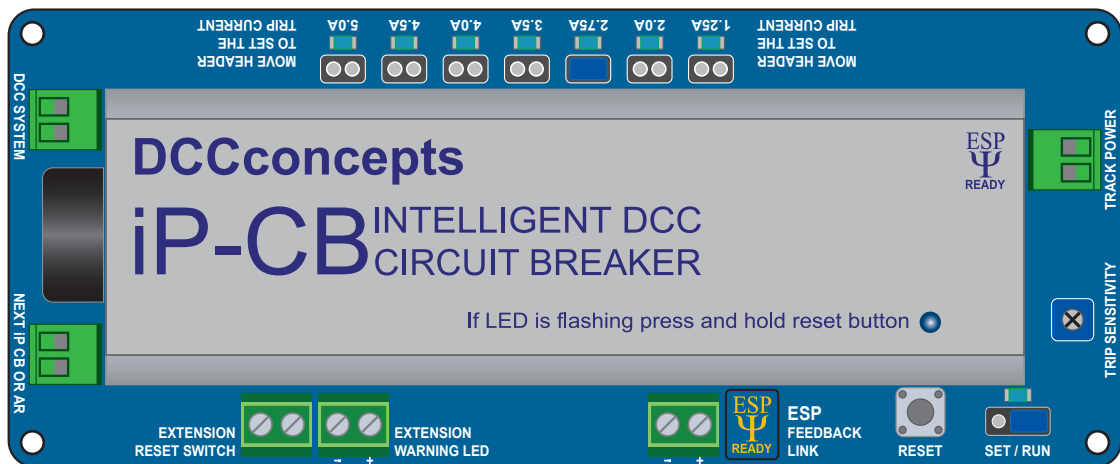

Please see the data sheet on **iP-CB Intelligent Circuit Breaker**
How To Change Any CV Setting before attempting to change any CVs.

CV57

This CV sets the time that the automatic reset function will wait before attempting to restore power and the time between attempts. CV57 is used in conjunction with CV64.

The default value is **0**, which is **2** seconds.

The range is $2 + CV57$

For example:

Set **CV57 = 3** then the wait time is $2 + 3 = 5$ seconds.

Please think carefully before changing any CVs on the iP-CB