


# LAYOUT

## CONCEPTS

### iP-CB Intelligent Circuit Breaker How To Set CV66

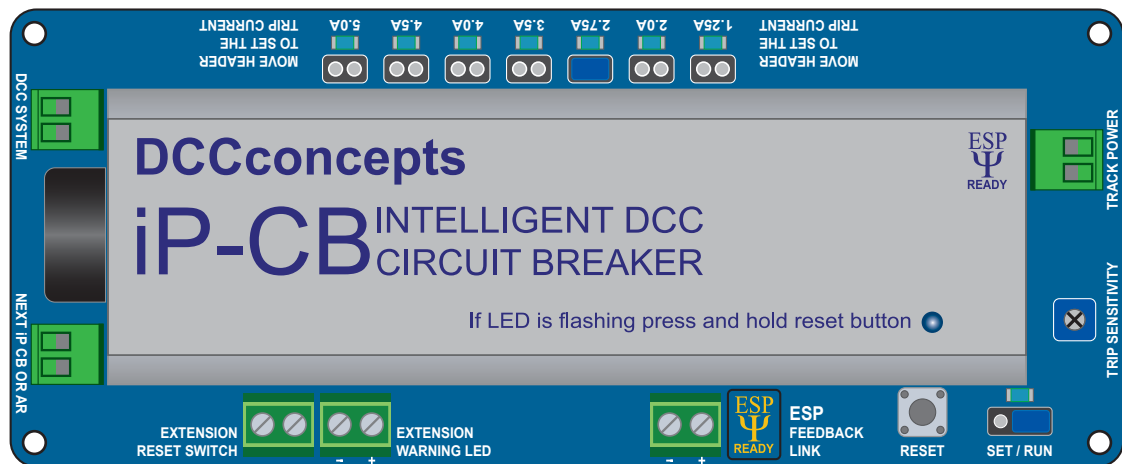

Please see the data sheet on **iP-CB Intelligent Circuit Breaker**  
**How To Change Any CV Setting** before attempting to change any CVs.

#### CV66

This CV sets whether the iP-CB is ON or OFF when the layout is first powered up.

The default value is **0**, in which the iP-CB is always **ON** when the layout is powered up.

The range:

CV64 = **0** - the iP-CB is always **ON** when the layout is powered up.

CV64 = **1** - the iP-CB is always **OFF** when the layout is powered up.

**Please think carefully before changing any CVs on the iP-CB**