


LAYOUT

CONCEPTS

iP-CB Intelligent Circuit Breaker Setting The DCC Accessory Address

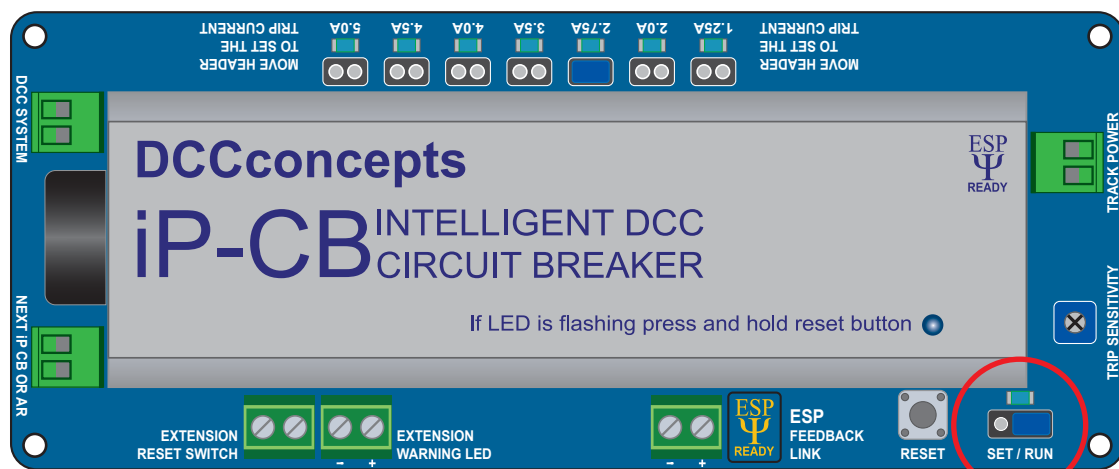

- 1 - Turn **OFF** power to the iP-CB.
- 2 - Move the **SET/RUN** jumper to the **SET** position.
- 3 - Restore power to the iP-CB and the blue LED above the **SET/RUN** switch will flash once per second.
- 4 - The default address is **200** - follow your DCC system instructions for operating an accessory to the address you require, for **1** to **2044**.
- 5 - If the new address has been successfully received the **SET/RUN LED** will flash quickly multiple times.
- 6 - Repeat sending the new address as per **steps 4 and 5**.
- 7 - Turn power **OFF** to the iP-CB.
- 8 - Move the **SET/RUN** jumper to the **RUN** position.
- 9 - Restore power to the iP-CB